




Motorola C168 Screen Replacement

Instructs user how to install a new screen into the phone.

Written By: Christopher Wu

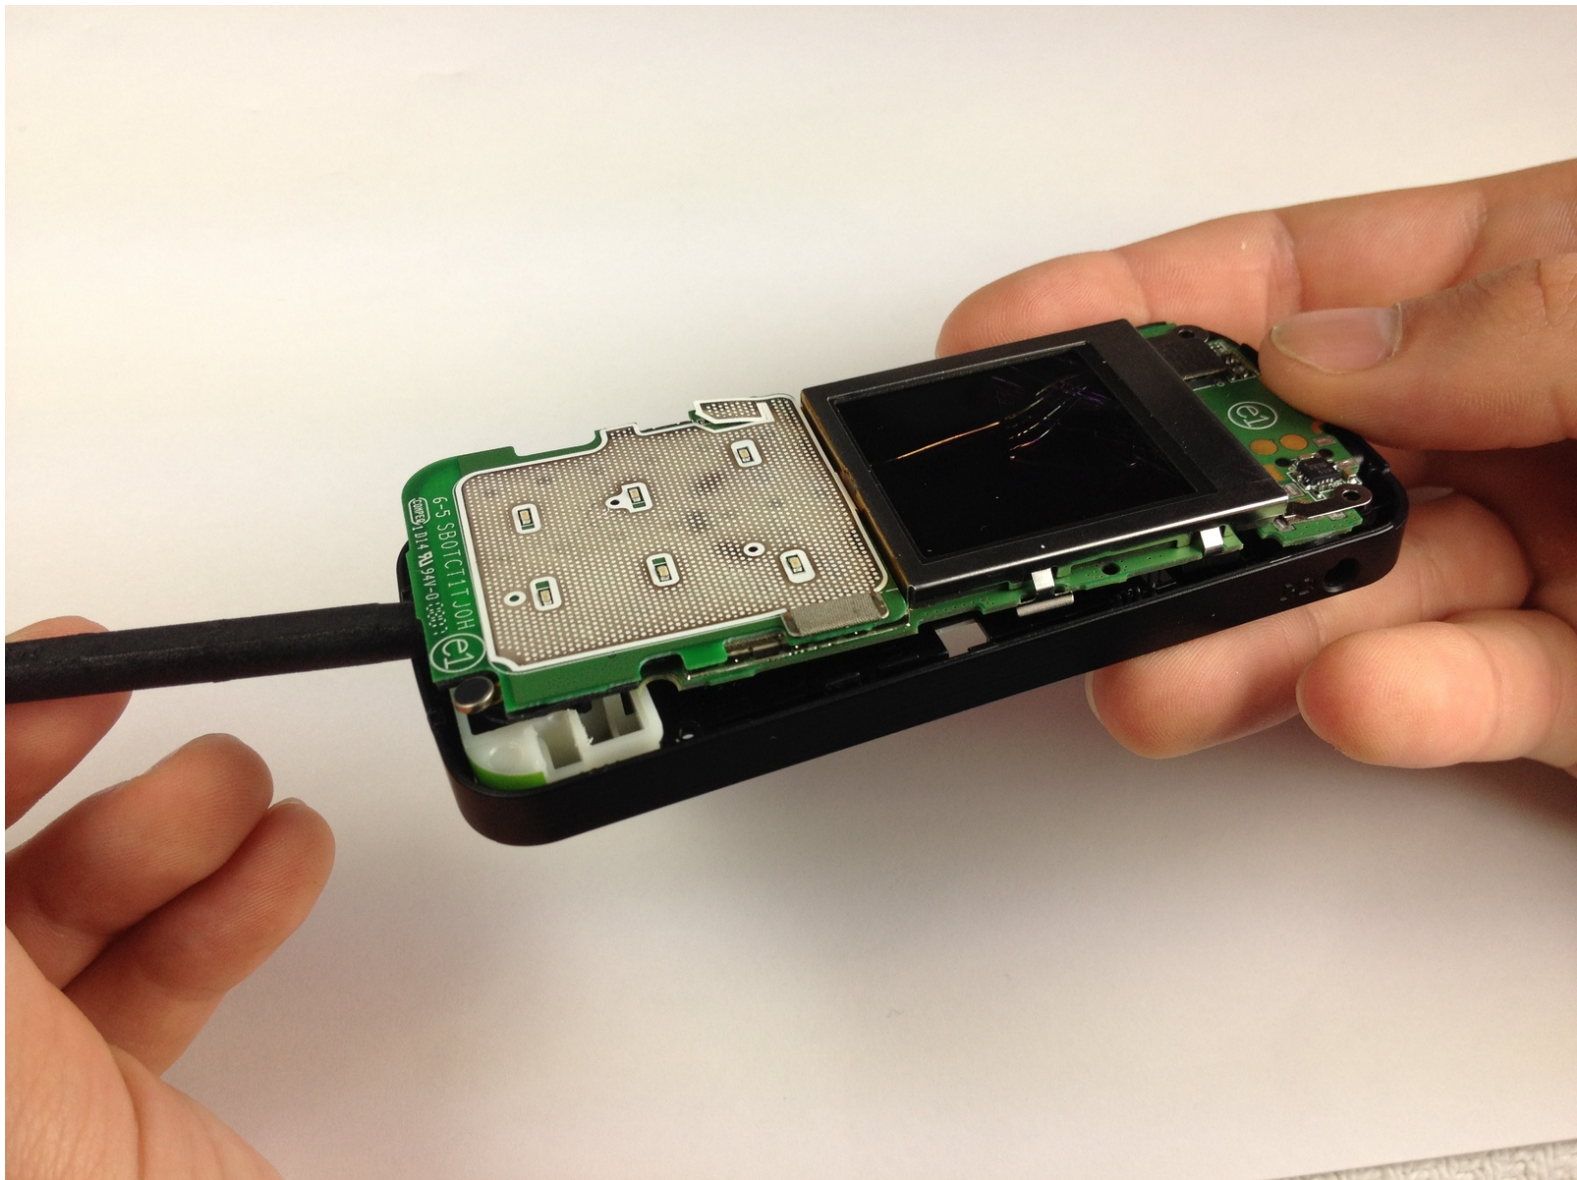



TOOLS:

- [Spudger](#) (1)
 - [T4 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Turn the phone so its back is facing you.
- Press the release button on the back cover, while simultaneously pulling the cover down.
- Remove the back cover.

Step 2



- Pinch the sides of the bottom of the battery and pull upward.

Step 3 — SIM Card



- Press and slide the SIM card down.
- Remove the SIM card.

Step 4 — Front Panel





- Orient the phone so its back is facing you.
 - Using a Torx T-4 screwdriver, carefully remove the 4 screws located at the corners of the phone.
- i** Note: If you are using iFixit's screwdriver toolkit, look for the smallest T-screwbit.

Step 5





- Lodge a [spudger](#) in between the front panel and the main frame of the phone.
- Using a good amount of torque, pry the front panel from the phone.

Step 6 — Screen

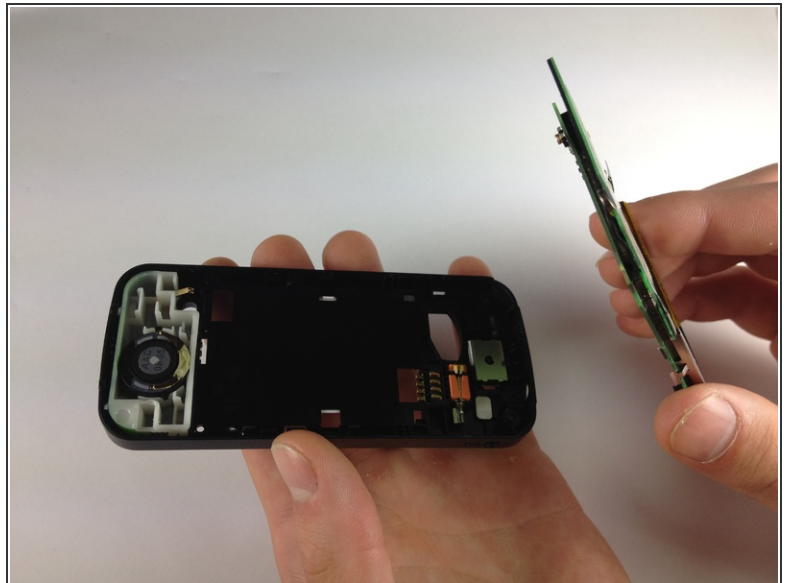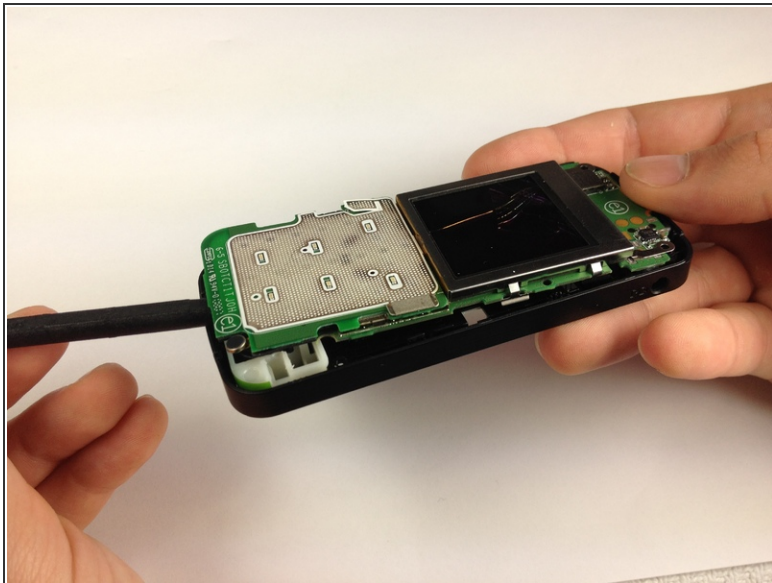

- Turn the phone to its natural orientation.
 - Insert a [spudger](#) at the bottom of the phone, between the phone's frame and the circuit board.
 - Pry the circuit board from the frame.
- i** Note: Prying away the board takes more force than you would expect.



Step 7

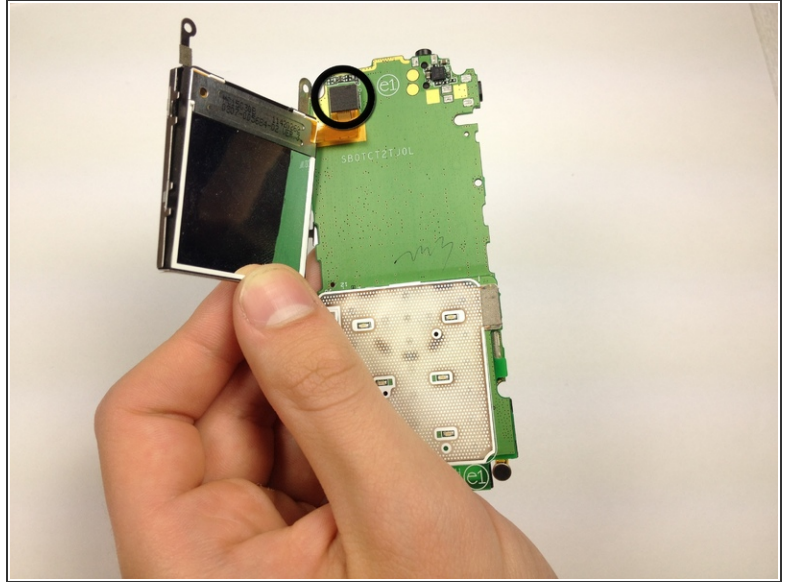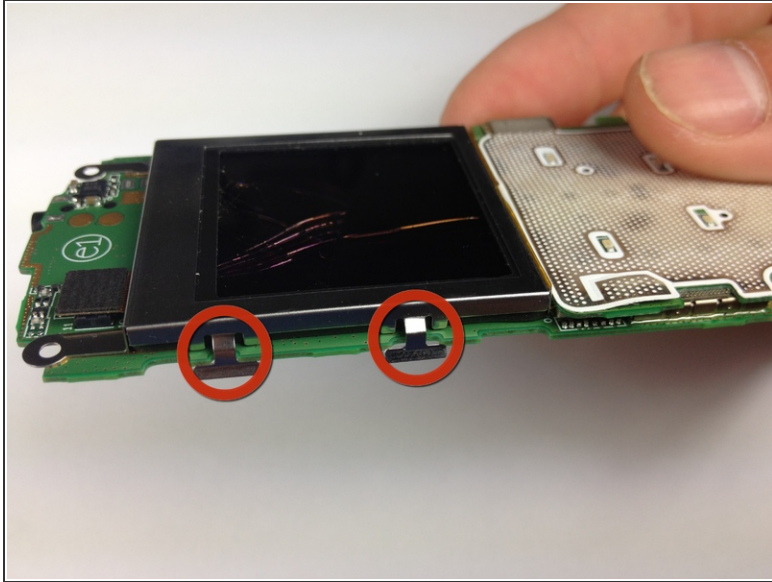

- Bend the screen clamps outward so they are no longer underneath the circuit board.
- Pull the screen encasing away from the circuit board.

⚠ Caution: The screen-to-phone interface will still be connected.

Step 8

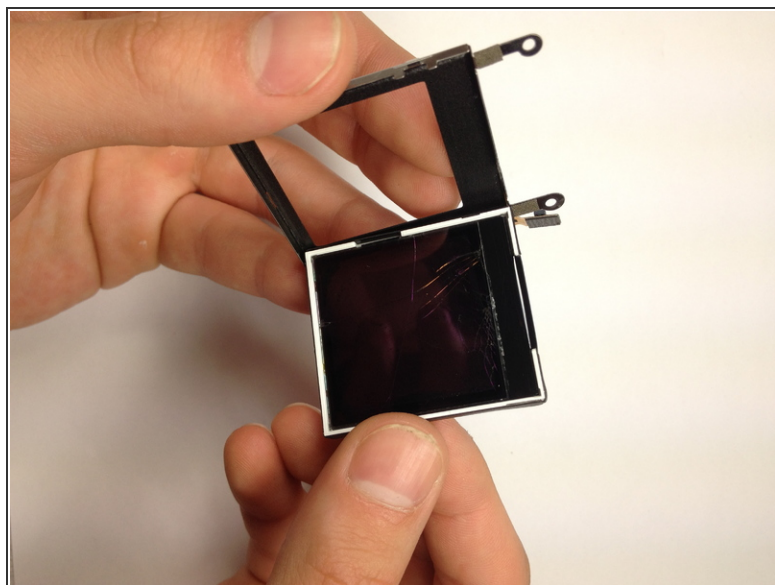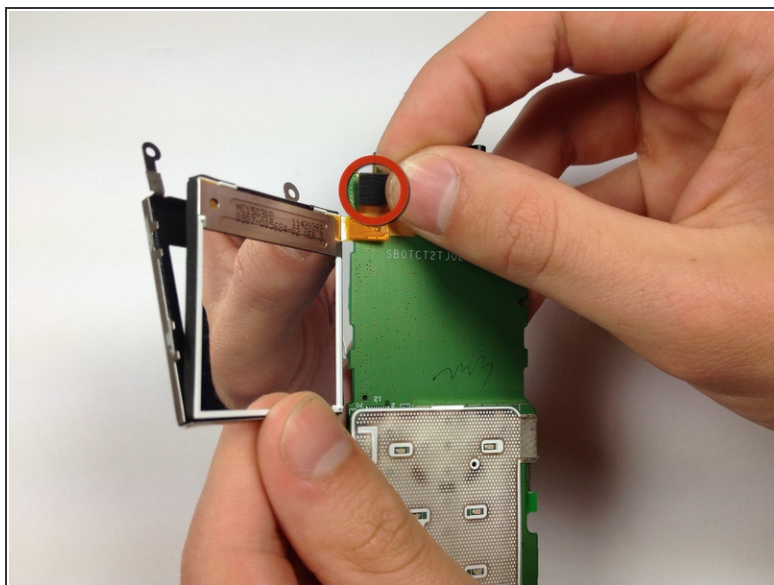

- Unplug the screen-to-phone interface.
- Remove the screen from its encasing by pushing it out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 06:13:23 AM.